




Procedure for checking MOB LED light unit

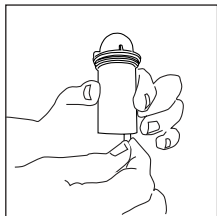


To check LED light function, grip the transit pin and pull firmly downwards to remove

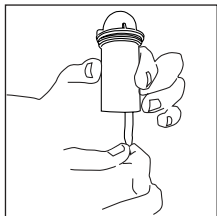


It is important to hold the unit **vertically**

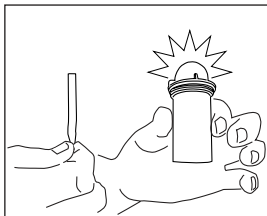

Once the transit pin has been removed the LED light unit should illuminate

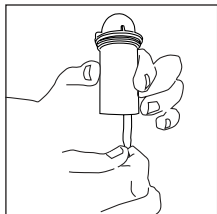

When replacing the pin it is **essential** that the light unit is kept **vertical**

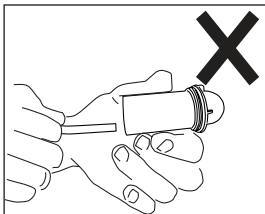

The unit must not be angled or horizontal when re-inserting the transit pin. Incorrect re-insertion procedure may cause the LED light to illuminate during transit, draining the battery

**The transit pin must be removed
when the MOB unit is installed.**



Để biết giá cả hoặc thêm thông tin, vui lòng liên hệ với AZMarine theo thông tin chi tiết bên dưới

AZMARINE - MARINE SAFETY EQUIPMENT

Tel: +84 938 697 839

Email: sales@azmarine.vn

Website: www.azmarine.vn

[Brands](#)

[Thiết bị cứu sinh](#)

[Thiết bị liên lạc hàng hải](#)

[Thiết bị dầu khí](#)



AZMarine Nhà phân phối thiết bị an toàn hàng hải uy tín nhất Việt Nam